

<http://www.emulation64.fr>

# CLEANING KIT

For use with the Nintendo 64 system

## **PRODUCT USAGE:**

Dust and dirt can damage your game system and result in poor picture quality, fuzzy sound and slow or "buggy" game play. Regular cleaning and maintenance of your state-of-the-art system and games will ensure hours of exciting action and a longer product life.

## **CONTENTS:**

- A. Cleaning cartridge for the Nintendo 64 system
- B. Cleaning solution for game cartridges
- C. Cleaning swab for game cartridges
- D. BONUS cleaning cartridge for Memory Card slot

## **INSTRUCTIONS:**

### DIRECTIONS FOR CLEANING YOUR NINTENDO 64 GAME CONSOLE

1. Turn off and unplug your Nintendo 64 console.
2. Select the Nintendo 64 cleaning cartridge from your kit.
3. Gently insert the cartridge into the game slot on the system, and then carefully pull it back out. Repeat this procedure 5-6 times to thoroughly clean the system.

**WARNING:** DO NOT use cleaning solution to clean the console game slot. Doing so may damage your Nintendo 64 system.



### **DIRECTIONS FOR CLEANING YOUR NINTENDO 64 GAME CARTRIDGES**

1. Place 1-2 drops of cleaning fluid onto one end of the cleaning swab.
2. Rub the connecting edge of the game cartridge in a back and forth motion with the cleaning swab.
3. With the dry end of the cleaning swab, wipe the connecting edge of the game cartridge until all the solution is absorbed and the cartridge is dry.
4. Check the connector pins on the game cartridge to ensure that they are clean and have a shiny golden appearance. If not, repeat the above steps.

### **DIRECTIONS FOR CLEANING THE MEMORY CARD SLOT**

1. Unplug the controller on which you wish to clean the memory card slot.
2. Select the Memory Card slot cleaning cartridge from your kit.
3. Gently insert the cartridge into the Memory Card slot on your controller, and then carefully pull it back out. Repeat this procedure 5-6 times to thoroughly clean the slot.

**WARNING:** DO NOT use cleaning solution to clean the Memory Card slot. Doing so may damage your Nintendo 64 controller.

### **RECOMMENDATIONS**

Use your CLEANING KIT regularly to keep your Nintendo 64 system, games and controllers in top condition.

Remove dirt from the cleaning cartridges after each use. To do so, follow the directions above for cleaning game cartridges. Make sure that the cleaning surface of the cartridge is completely dry before reusing it.

Always store your CLEANING KIT in a clean, dry place away from dust.



## Interact - Cleaning Kit

CAUTION: Performance Cleaning Solution is detergent based, and may cause minor eye irritation. Avoid getting the solution in your eyes. In case of accidental contact, flush eyes with running water. Consult with a physician if irritation persists. Do not drink the solution. In case of accidental ingestion, drink fluids. Cleaning Solution is flammable. Keep away from all heat and open flames. Children under 10 should not use this product without parental supervision.

