

SV-304

<http://www.emulation64.fr>

MAKO PAD 64

Ergonomically designed handset

8-way digital direction control

C - group button unit

3D Analog-Joystick

Memory Card Slot

Mode indicators

Right Fire button

Left Fire button

A Fire button

B Fire button

Z Fire button


Start button

Slow motion


Auto-fire

Features

InterAct UK
Emlyn Street, Farnworth,
Bolton, BL4 7EB,
United Kingdom

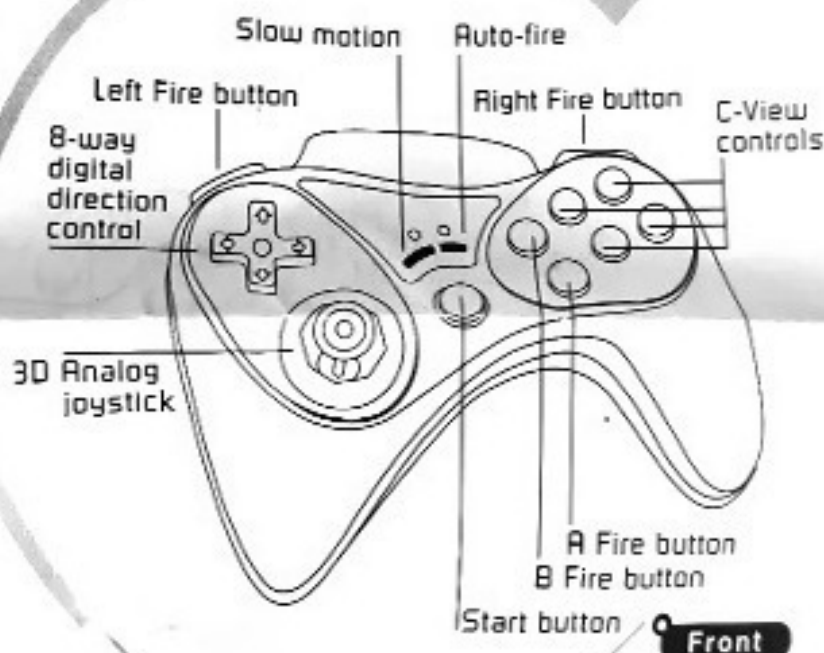

Memory Card Slot

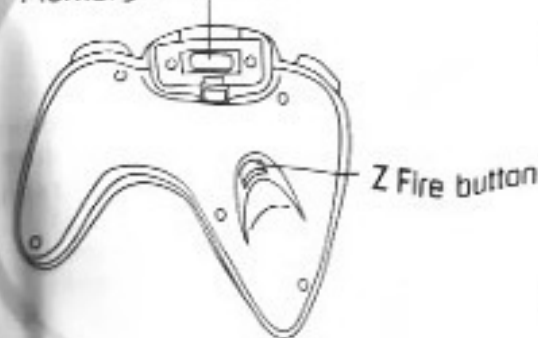

PRECAUTIONS:

- 1 Do not store the unit in direct sunlight or at extreme temperature, as this may damage the components.
- 2 Do not open the cabinet. Maintenance and servicing should be done by qualified personnel only.
- 3 Be careful not to spill any liquid on the unit, as this may damage the components.

Emulation64.fr



Introduction

Thank you for buying the MakoPad 64, the ultimate digital and analog gamepad for the Nintendo® 64 Entertainment System. The MakoPad 64 features the traditional eight-way control of most entry-level gamepads, plus the added value of auto-fire and slow-motion.

Your MakoPad 64 package should include the MakoPad 64 controller, instruction manual, registration card, and warranty card. If you are missing any of these items, please contact InterAct Accessories Customer Service at (410) 238-1426. Please take this time to fill out your registration card so you can receive updates and information on new products from InterAct.

Product Description

Nine fire buttons (A, B, Z, L, R, ▲, ▼, ◀, ▶)

Thumb-controlled digital knob (↑, ↓, ←, →) for directional control

Thumb-controlled analog knob for 3D directional control

Individual auto-fire function with LED indicator

Slow-motion function with LED indicator

Controller Pak™ slot (Controller Pak not included)

How to Program Individual Auto-Fire Function

The MakoPad 64 features individual auto-fire for each fire button. To set the auto-fire, press the **AUTO-FIRE** button while pressing the button you wish to set to auto-fire. To cancel individual auto-fire on a button, simply hold down the **AUTO-FIRE** button while pressing down the button you wish to reset.

The auto-fire LED will shine if any fire button is set to individual auto-fire. When a button has been set to auto-fire, the auto-fire LED will flash when that button is pressed.



game which will allow the **START** on/off button to act as a "pause" button. To set the slow-motion function on your MakoPad 64, press the **SLOW** button once. To cancel slow-motion, press the **SLOW** button again. When slow-motion is activated, the Slow-Motion LED indicator will flash.

All auto-fire and slow-motion settings will be lost when the MakoPad 64 is disconnected from the Nintendo 64 or the system is switched off.

Care for the Unit & Troubleshooting

The MakoPad 64 is an electronic unit, and should be treated with care when handling. InterAct Accessories recommends that you do not disconnect or connect the MakoPad 64 to your Nintendo 64 when the system is switched on. We also recommend that you do not store the unit in direct sunlight or at extreme temperatures, or spill any liquids on the unit. Finally, do not open the case of the MakoPad 64. Maintenance and servicing should be done by InterAct Accessories only.

